


Nomogramm - Zylinderkraft

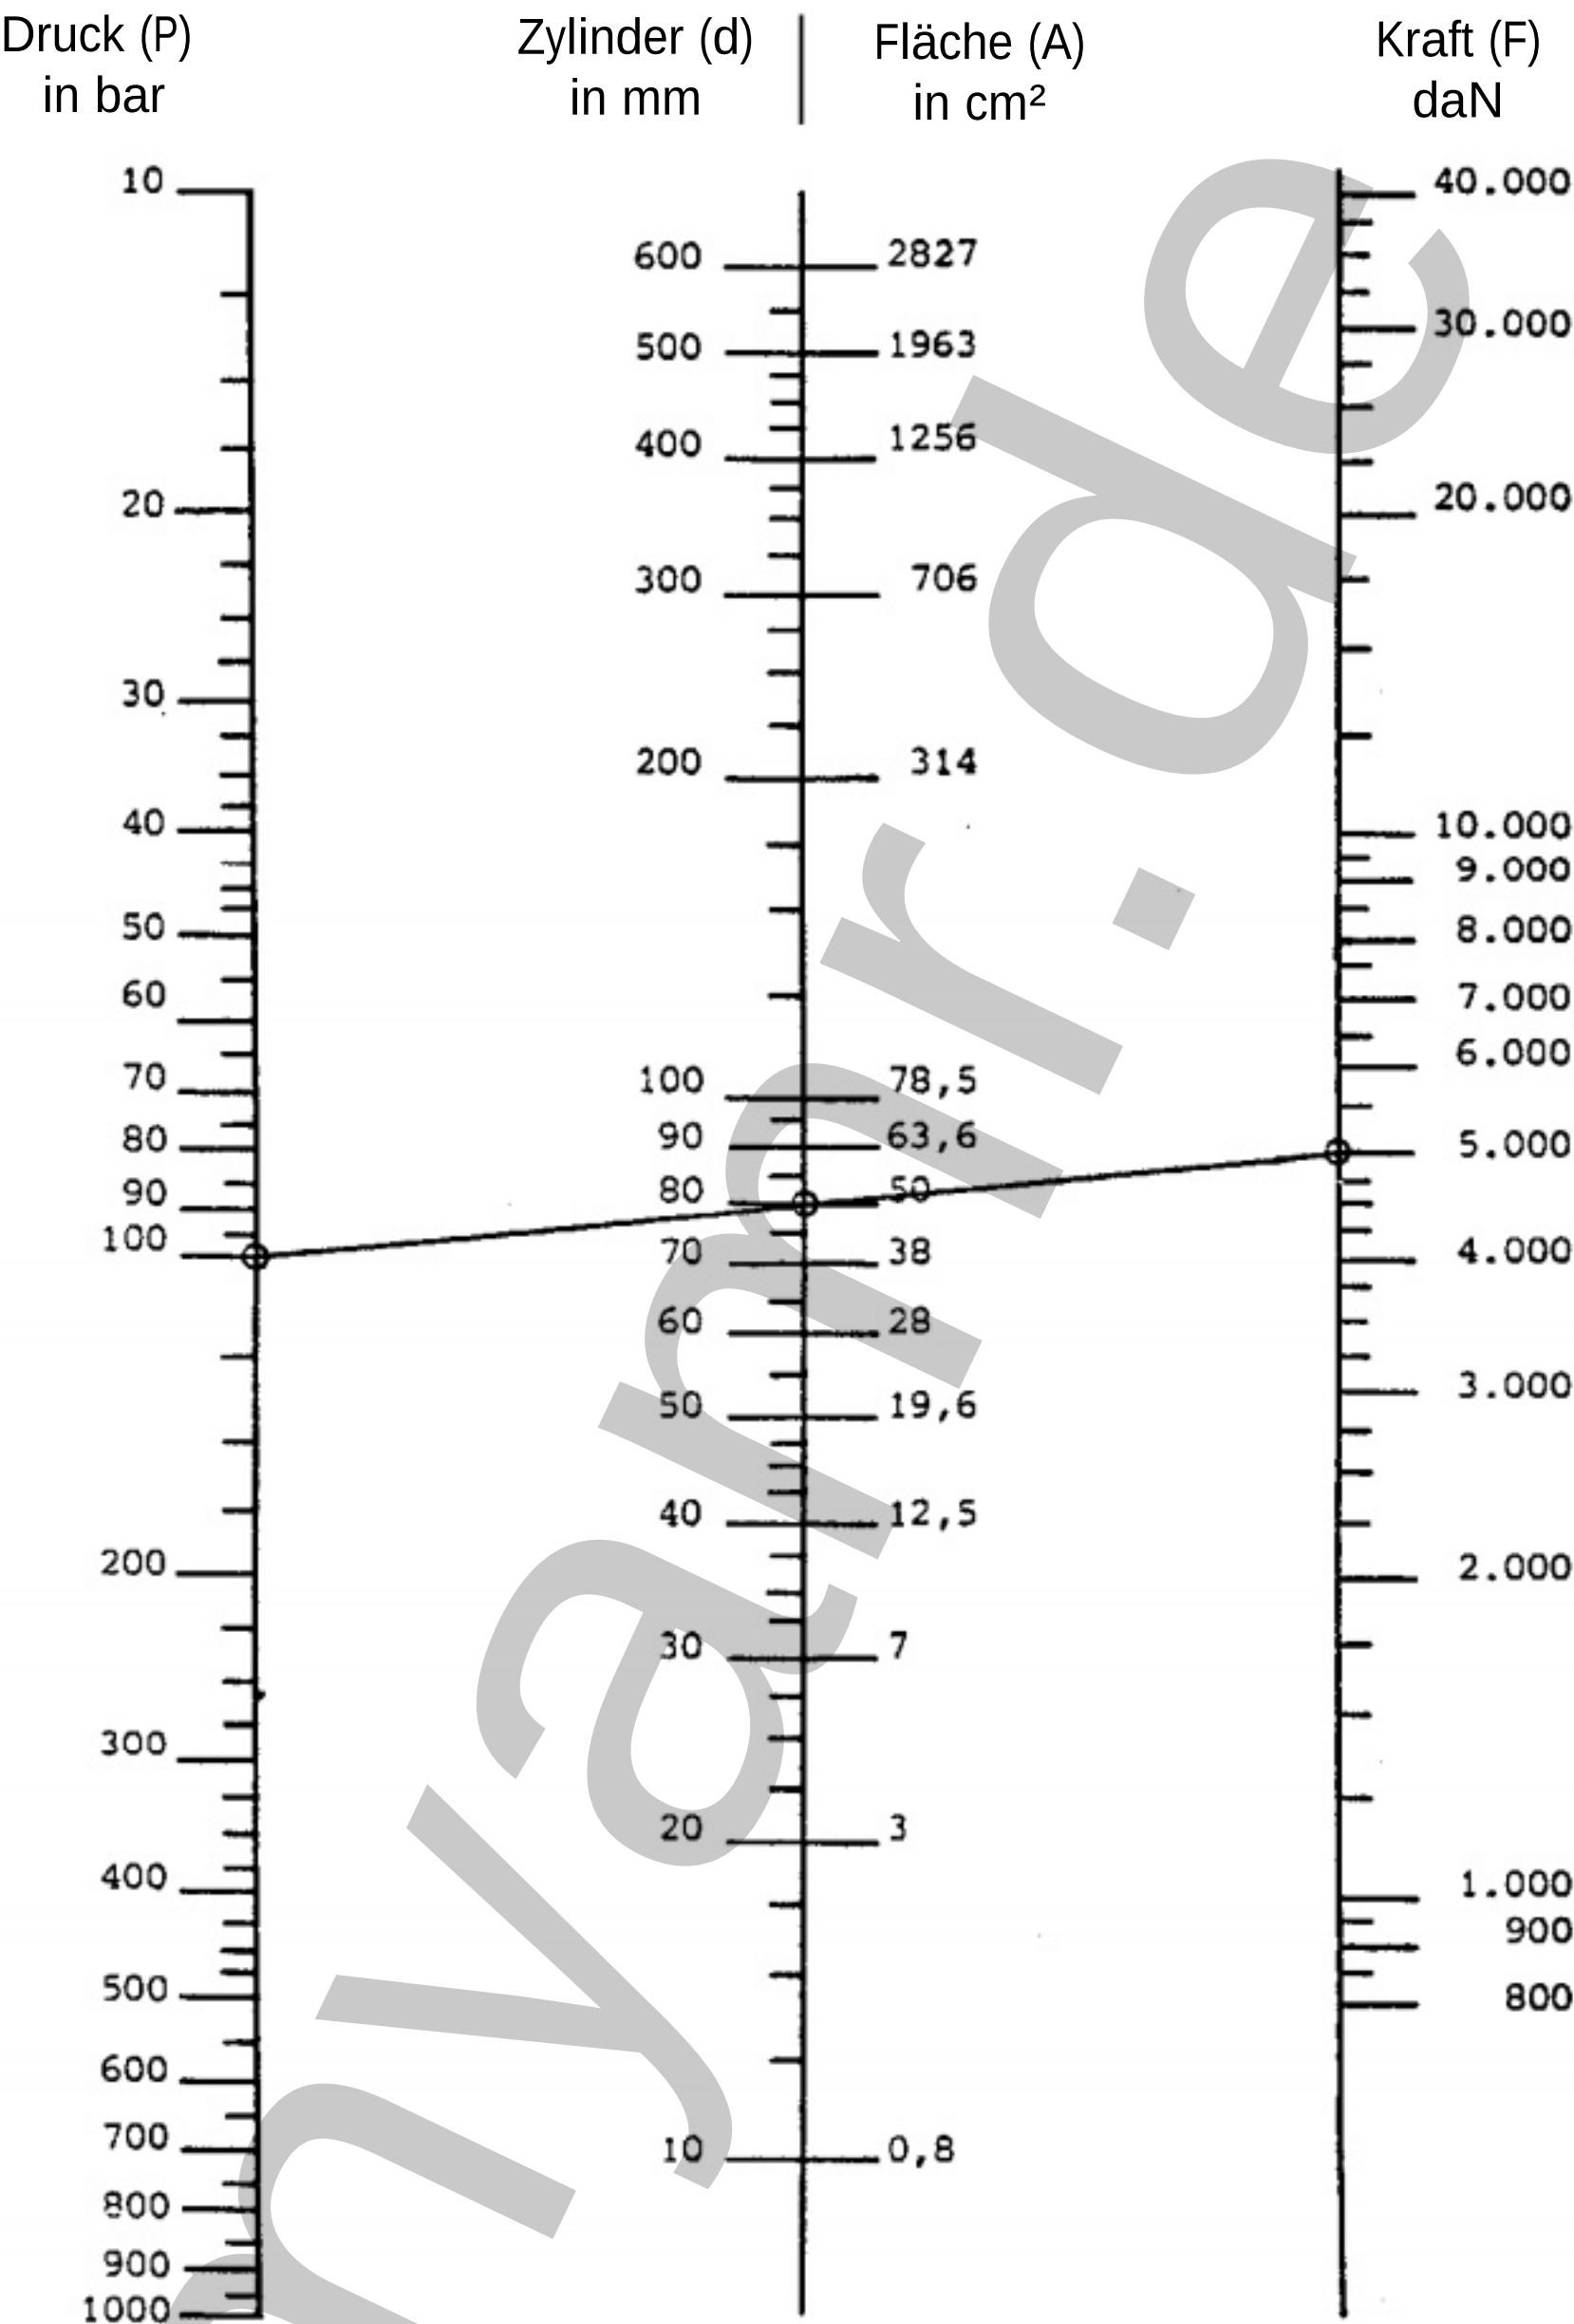

Beispiel:

- P = 100bar
- D = 80 mm
- F = 5000 daN

$F_{\text{teo}} = P \cdot A$